


**EN** Appropriate for the listed vehicles **FR** Les barres de toit ne doivent pas être utilisées sur des véhicules autres que spécifiés **ES** Válido para la lista adjunta de vehículos **DE** Passend für die gelisteten Fahrzeuge **IT** Appropriare per veicolo **NL** Geschikt voor voertuig **PT** Apropriado aos seguintes veículos **PL** Pasuje do samochodów **HU** Megfelelő gépjármű **RU** Подходит для автомобилей **RO** Convenabil pentru vehicul **SK** Vhodné pre vozidlo **CS** Vhodné do vozidel **SV** Takracket endast avsett för angivna fordon **BG** Релсите за багажник на покрива не трябва да се използват при автомобили, различни от посочените **TR** Tavan barları belirtilen araçların dışındaki araçlarda kullanılmamalıdır **UK** Рейлінги не можна встановлювати на автомобілі, яких немає у списку **EL** Για το οχήμα **DA** Egnet til køretøjer

# Mont Blanc®

roof bars, boxes, bike carriers, etc.

## PRO RACK MEDIUM N°215

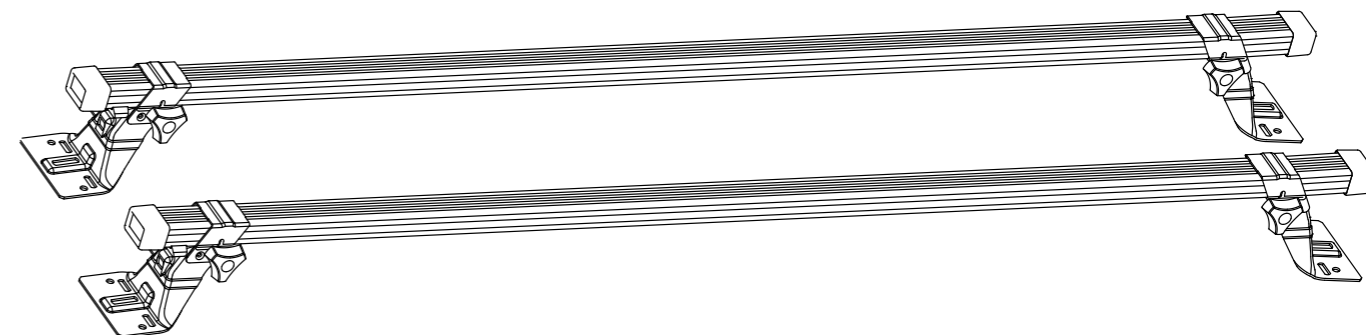

CITROËN			PEUGEOT			TOYOTA		
Dispatch III combi M	05/16 →	75	Expert combi compact	05/16 →	75	Proace II combi compact	05/16 →	75
Dispatch III combi XL	05/16 →	75	Expert combi long	05/16 →	75	Proace II combi long	05/16 →	75
Dispatch III combi XS	05/16 →	75	Expert combi standard	05/16 →	75	Proace II combi medium	05/16 →	75
Dispatch III van M	05/16 →	75	Expert fourgon compact	05/16 →	75	Proace II compact	05/16 →	75
Dispatch III van XL	05/16 →	75	Expert fourgon long	05/16 →	75	Proace II long	05/16 →	75
Dispatch III van XS	05/16 →	75	Expert fourgon standard	05/16 →	75	Proace II medium	05/16 →	75
Jumpy III combi M	05/16 →	75	Expert van compact	05/16 →	75	Proace II verso long	05/16 →	75
Jumpy III combi XL	05/16 →	75	Expert van long	05/16 →	75	Proace II verso medium	05/16 →	75
Jumpy III combi XS	05/16 →	75	Expert van standard	05/16 →	75	Proace II verso compact	05/16 →	75
Jumpy III fourgon M	05/16 →	75	Traveller compact	05/16 →	75			
Jumpy III fourgon XL	05/16 →	75	Traveller long	05/16 →	75			
Jumpy III fourgon XS	05/16 →	75	Traveller standard	05/16 →	75			
Spacetourer XS	05/16 →	75						
Spacetourer M	05/16 →	75						
Spacetourer XL	05/16 →	75						

- S 111**
- b x 4** ø8 x 25
  - c x 4** ø8
  - d x 4** ø8
  - e x 4**

- f x 4 (P049)**
- g x 1**

**Max**

**P.4**

**5,5 kg**



**EN** Keep these instructions for future use.  
**FR** Garder cette notice pour les utilisations futures.  
**ES** Guardar este manual para futuras utilizaciones.  
**DE** Die Anleitung zur späteren Benutzung aufbewahren.  
**IT** Conservare queste istruzioni per ogni ulteriore consultazione.  
**NL** Bewaar deze gebruiksaanwijzing voor toekomstige raadpleging.  
**PT** Guardar este manual para as utilizações futuras.  
**PL** Zachować instrukcję w przypadku użytkowania w przyszłości.  
**HU** Őrizze meg ezt a használati utasítást későbbi felhasználás céljából.  
**RU** Сохраните эту инструкцию для дальнейшего пользования.  
**RO** Păstrați instrucțiunile pentru consultarea lor ulterioară.  
**SK** Tento návod si uchovajte pre ďalšie použitie.  
**CS** Uchovejte návod pro pozdější použití.  
**SV** Behåll denna information för framtida bruk.  
**BG** Запазете това упътване за бъдещи справки.  
**TR** Bu kılavuzu daha sonraki kullanımlar için saklayınız.  
**UK** Збережіть цю інструкцію для використання у подальшому.  
**EL** Φυλάξτε αυτό το εγχειρίδιο οδηγιών για μελλοντικές χρήσεις.  
**DA** Gem denne vejledning til senere brug.

**Mont Blanc France**  
 24-30 rue Claude Bernard - C.S. 61768  
 35417 Saint Malo Cédex - France  
 After Sales : +33 (0)2 99 21 12 72  
 Office : +33 (0)2 99 21 12 70  
 Fax : +33 (0)2 99 21 12 71

**www.montblancgroup.com**

Pour en savoir plus : [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)

**EN** Fitting on vehicles **FR** Montage sur véhicule **ES** Colocación en vehículos **DE** Montagen auf Fahrzeugen **IT** Montaggio su veicoli **NL** Montage op voertuigen **PT** Montagens em veículos **PL** Montowanie na pojazdach **HU** Felszerelés gépjárműre **RU** Монтаж на автомобиль **RO** Montaj pe vehicul **SK** Upevnenie na vozidlá **CS** Montáž na vozidlo **SV** Montering på fordon **BG** Монтаж върху превозни средства **TR** Araçlara Montaj **UK** встановлення на автомобіль **EL** Τοποθέτηση στο όχημα **DA** Montage på køretøjer

