

Mont Blanc®

(D)

MONTAGEANLEITUNG

(GB)

FITTING INSTRUCTIONS

(S)

MONTERINGSANVISNING

(F)

INSTRUCTIONS DE MONTAGE

(FIN)

ASENNUSOHJEET

(NL)


MONTAGEVOORSCHRIFT

(E)


INSTRUCCIONES DE MONTAJE

VOLKSWAGEN CRAFTER 04/06-
 MERCEDES SPRINTER (906) 06/06-
 CITROËN NEMO 08-, FIAT FIORINO 08-
 PEUGEOT BIPPER 08-

867

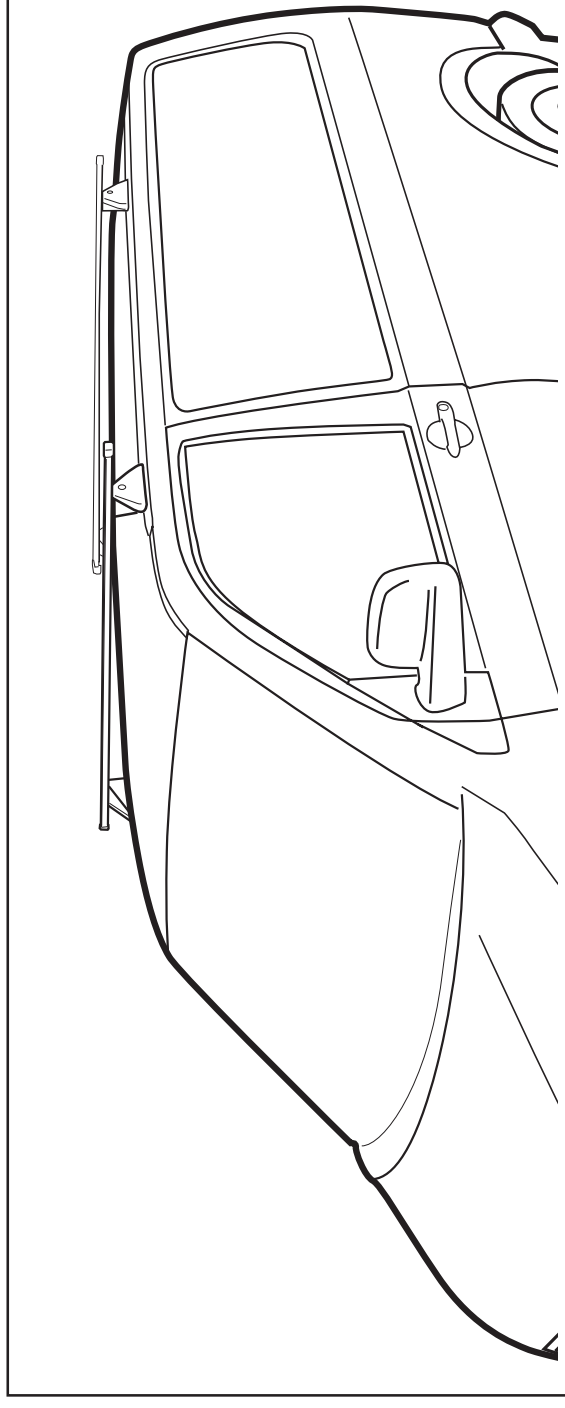

DIN 75302/03.91

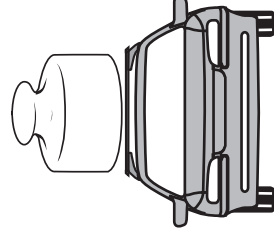

Max 50 kg

x1


Max 100 kg

x2


Max 150 kg

x3

2,5 kg

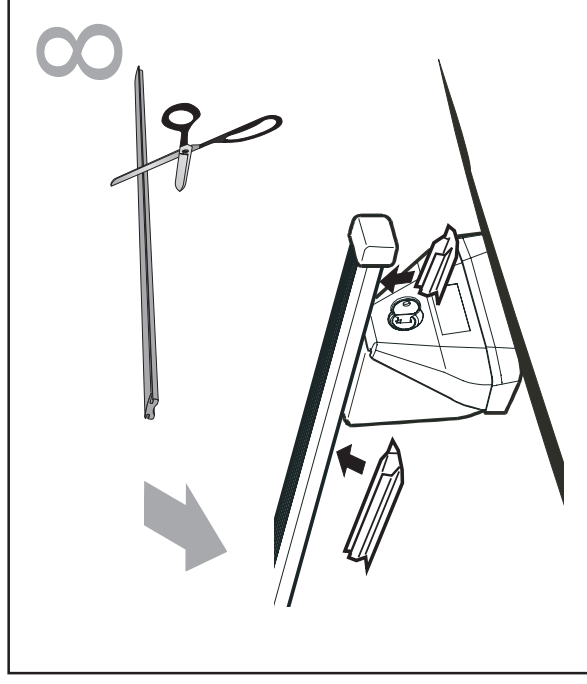

8

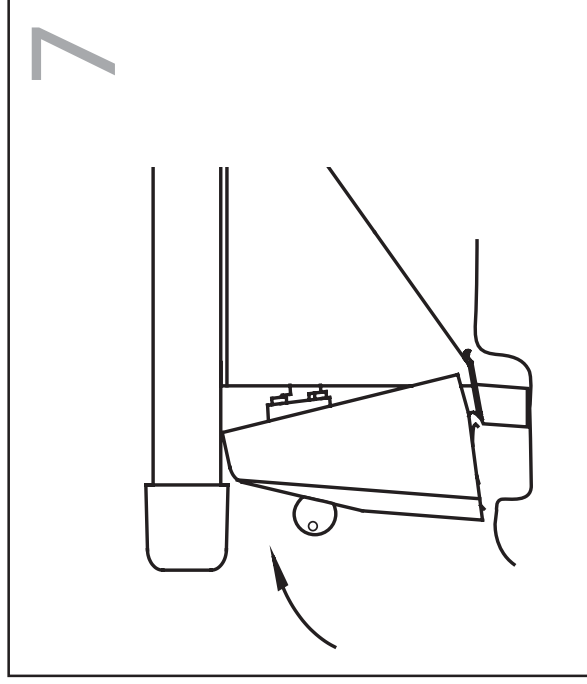

7

Sweden:
 Mont Blanc Industri AB
 Phone +46 33 222700

UK:
 Mont Blanc Industri UK Ltd
 Phone +44 1525 850800

France:
 Mont Blanc France SAS
 Phone +33 2 99211270

www.montblancgroup.com

0805 151288-2

